

ACTIVATING A PRECI-CLIP RIDER

1. Take a wax knife or a cement spatula and carefully press the broad side of the instrument between the uncovered parts of the rider and the acrylic resin.
2. Both sides of the rider must be evenly activated.
3. Check if adequate retention has been attained.